



2041/2

EN

Homokinetic joint puller

SLO

Snemalec homokinetičnih zglobov

D

Abnehmer der homokinetischen Gelenke

RU

Съёмник для шарниров равных угловых скоростей (ШРУС)

CZ


Stahovák homokinetického kloubu

IT


Estrattore per giunto omocineticox

 **UNIOR**[®]
uniortools.com


USAGE

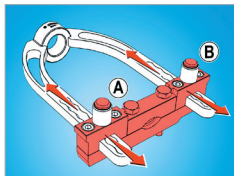


Pred vpetjem v primež (po potrebi) nastavite ogrodje držala, z pritiskom dveh gumbom (A in B) na pravilno dolžino vratu zgloba
• Before applying tool into vice (if needed) setup the right length by pressing the two buttons (A and B) to the suitable length.

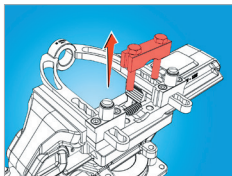


Demontiramo zgornje nastavljivo držalo (držalo ima dva vijaka S17)
• Dismount the upper adjustable holder (the holder has two screws S17).

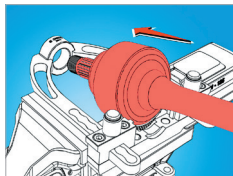


Skrozi obroč vstavimo homokinetičen zglob z navojem naprej. Vpneto lahko zglobe z premerom vratu od Ø18 do premera Ø36
• Insert the homokinetic joint through the ring with the threading head ahead. Tool can grasp homokinetic joints with neck diameters from Ø18mm through diameters of Ø36mm.

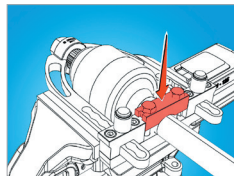


Montiramo zgornje držalo, ter hkrati privijemo 2 vijaka
• Mount the upper holder and at the same time screw the two screws.

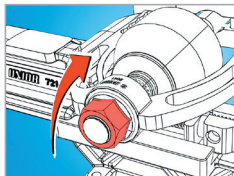

Na navoj zgloba privijemo matico homokinetičnega zgloba
• Screw on the nut of the homokinetic joint on the thread of the joint.

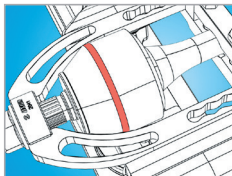

Snamemo vskočnik, ki drži manjšeto zgloba
• Dismount the circlip which is holding.

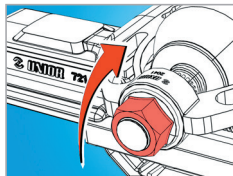

Pričnemo privijati matico zgloba saj s tem razstavimo homokinetičen zglob
• Start to screw in the nut of the joint with which you dismount the homokinetic joint.

The manufacturer accepts no responsibility for misuse or any use that is not in compliance with the contents of this manual instruction.

•
Proizvajalec ne prevzema nobene odgovornosti za splošno nepravilno uporabo orodja in nepravilno uporabo orodja ki ni v skladu z navodili izdelka.

