

990...

EN Modular work bench

SLO Modularni delovni pult



Unior d.d., Kovaška cesta 10, 3214 Zreče, Slovenia, T: +386 3 757 81 00, www.uniortools.com

2xDim.10
1xDim.13
1x
1x
1xØ10,5
1xØ12
1xS8

1

2

3

4x

4

A=B; A=B+C

5

6

4xM6x16
4X

7

8

4xM8

9

Ø10,5x24mm
90°

10

4x

11

12

L-129mm
L-80mm

13

4X

14

4xM8

15

2xØ10,5x24mm

16

17

L/2

18

3xØ10,5x24mm

19

7X

20

21

7xM8

22

2X



























23

6X

24

25

4X

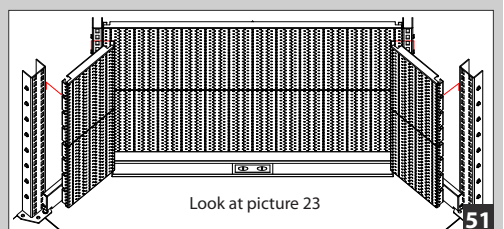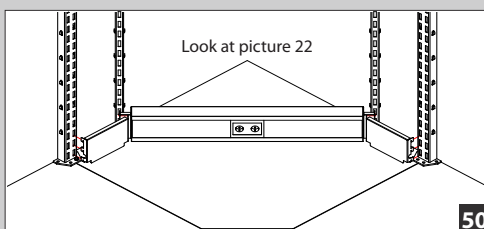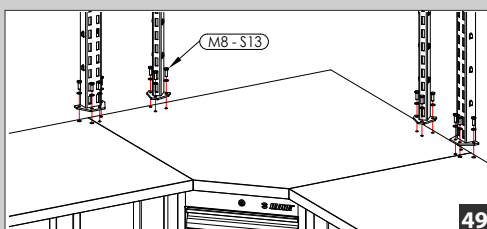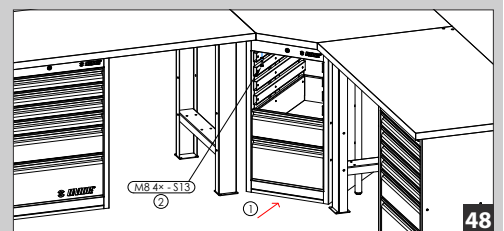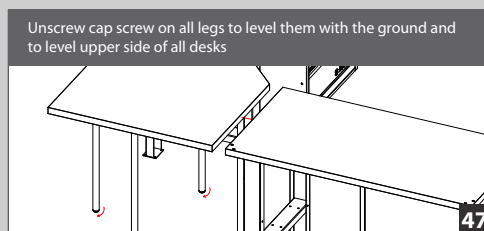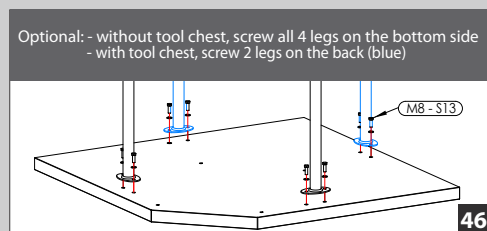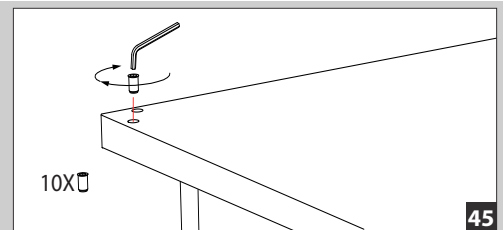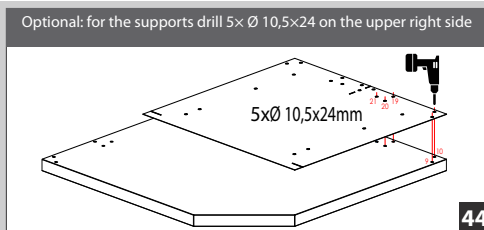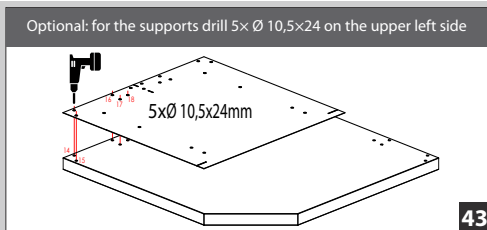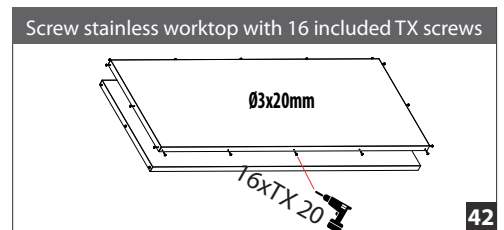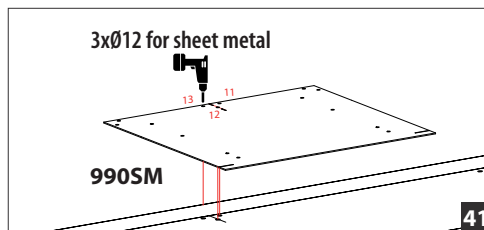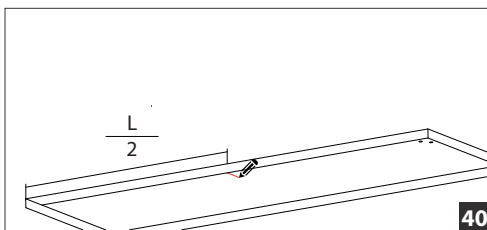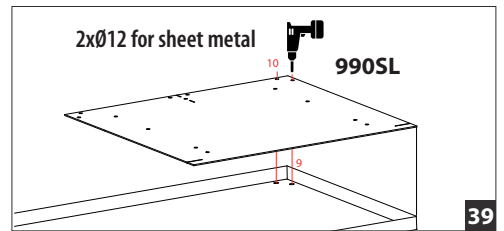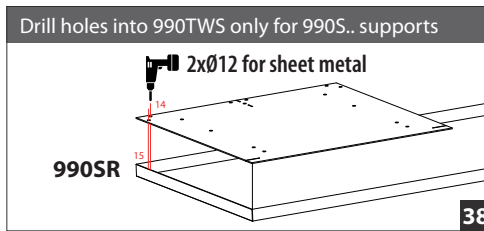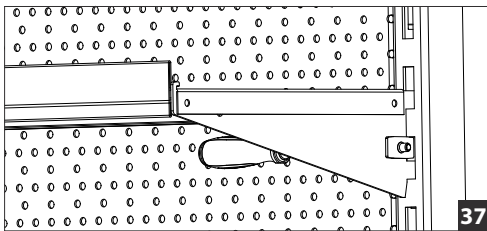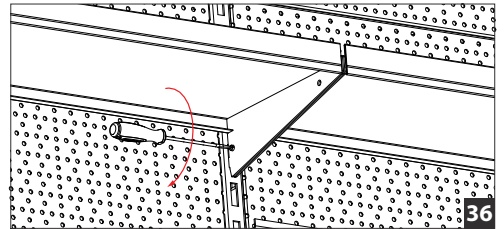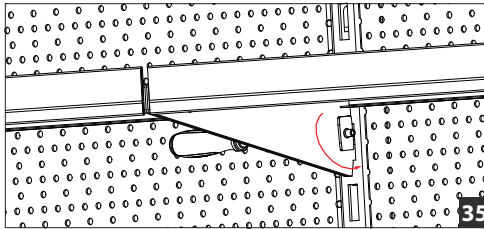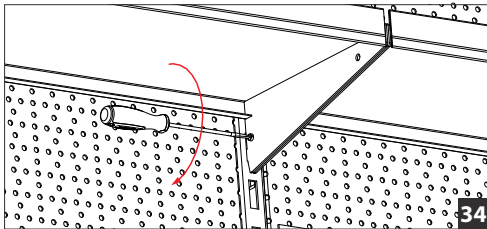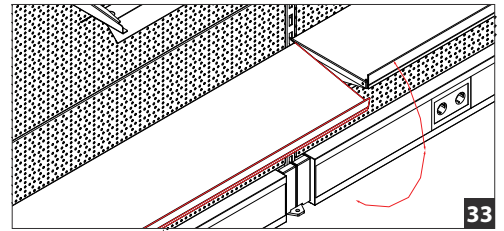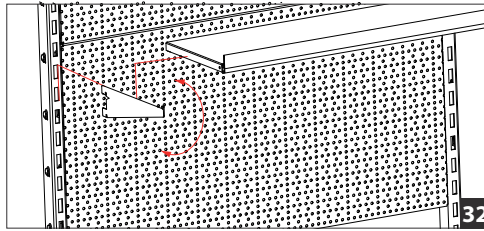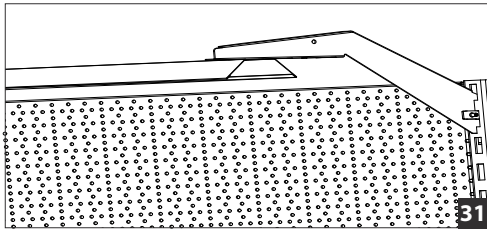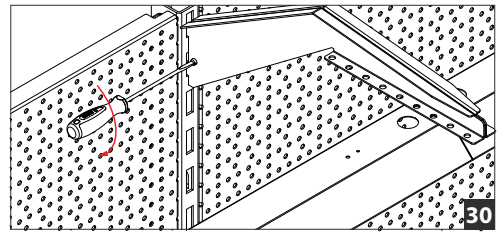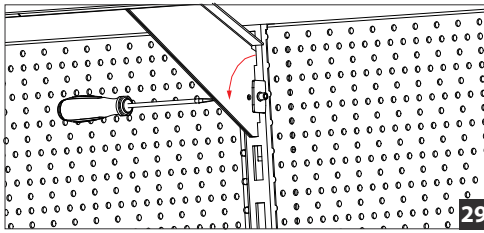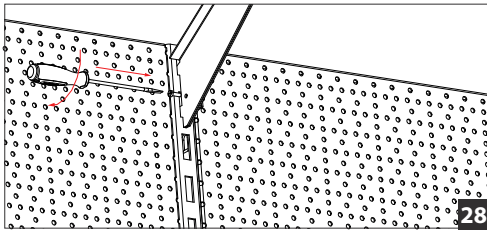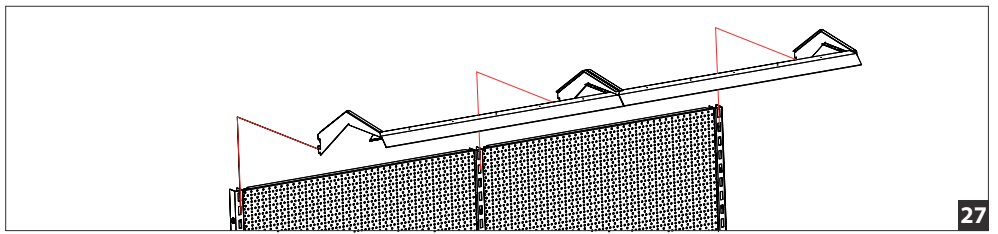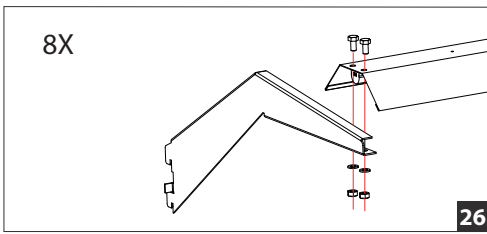

Optional: for the supports drill 5x Ø 10,5x24 on the upper left side

Optional: for the supports drill 5x Ø 10,5x24 on the upper right side

Optional: - without tool chest, screw all 4 legs on the bottom side
- with tool chest, screw 2 legs on the back (blue)

Unscrew cap screw on all legs to level them with the ground and to level upper side of all desks

Look at picture 22

Look at picture 23