

990...


EN Modular work bench



























SLO Modularni delovni pult



uniortools.com

Unior d.d., Kovaška cesta 10, 3214 Zreče, Slovenia, T: +386 3 757 81 00, www.uniortools.com

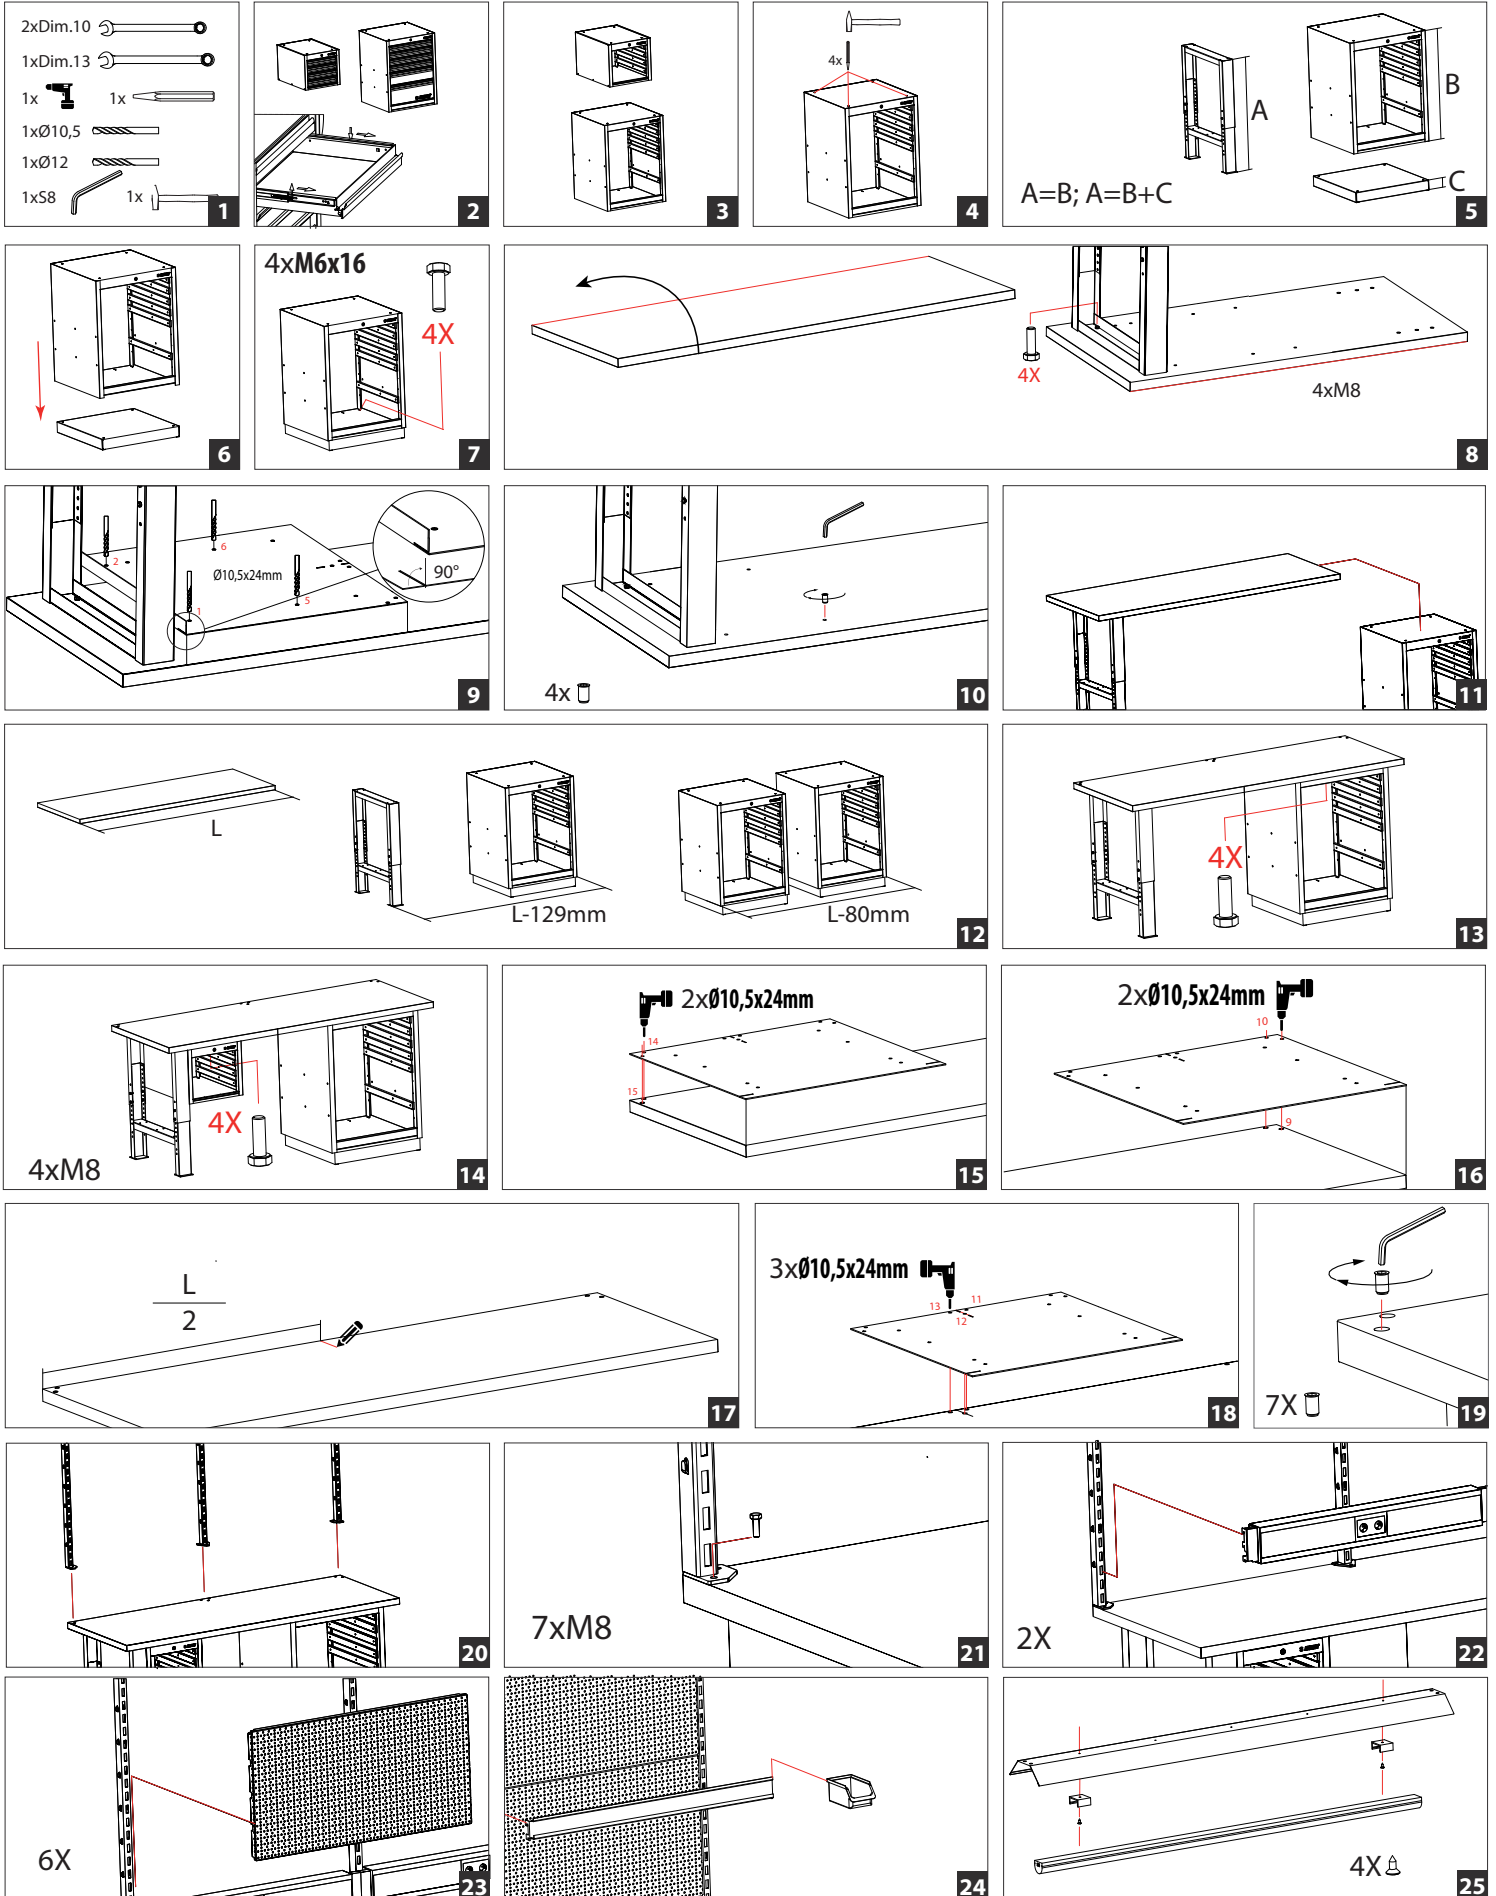

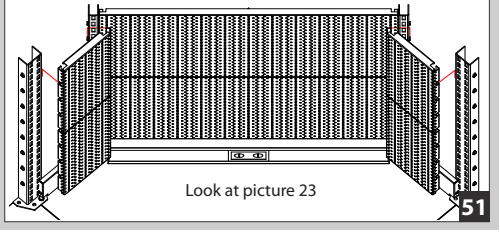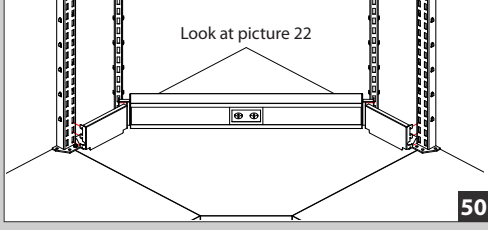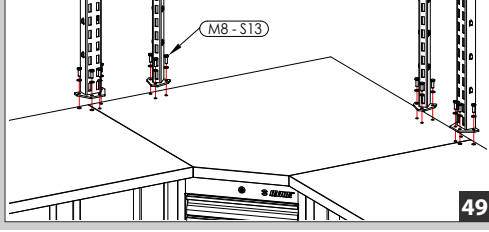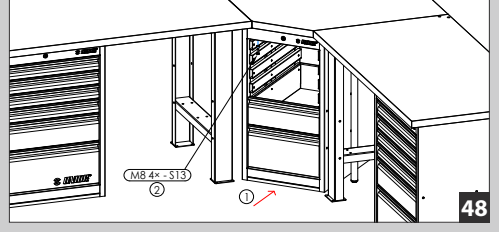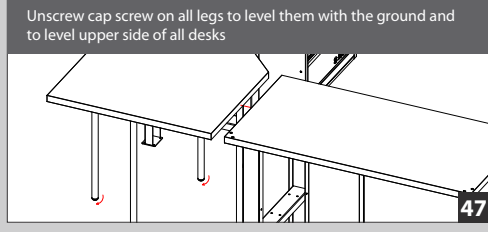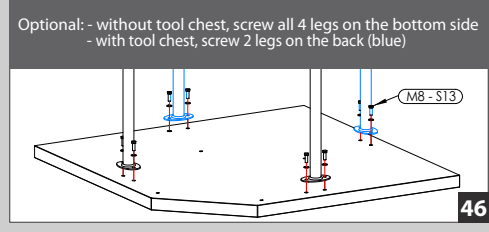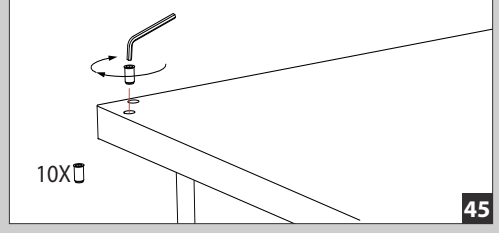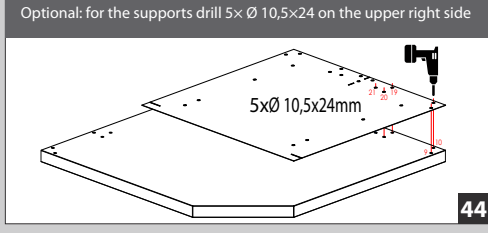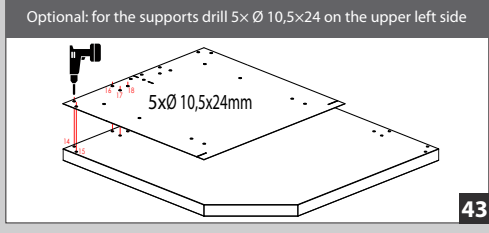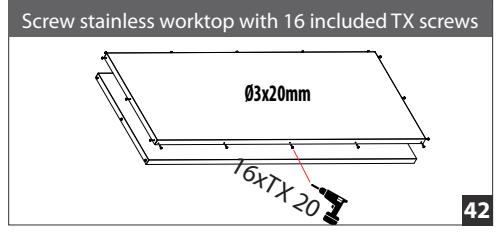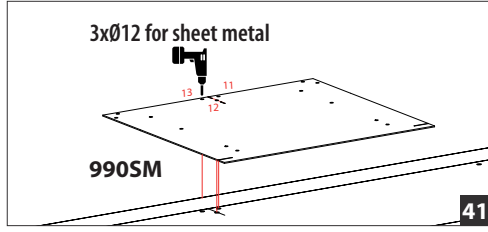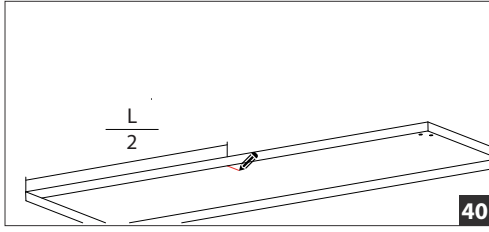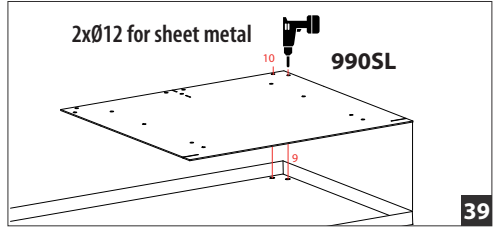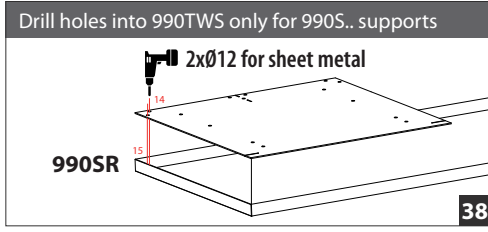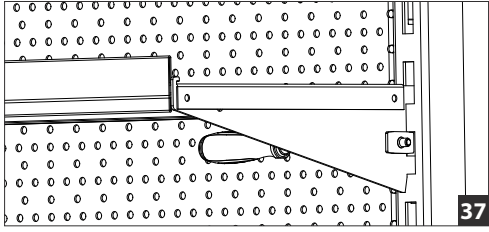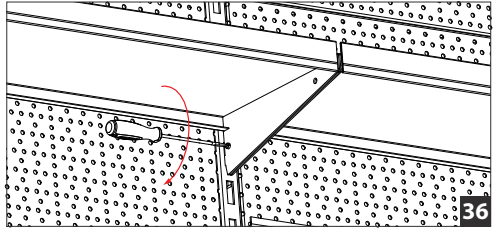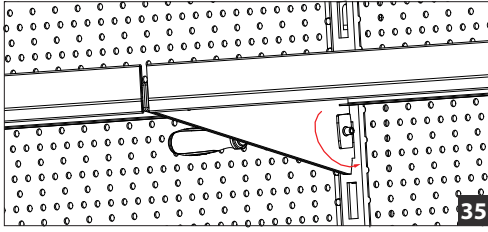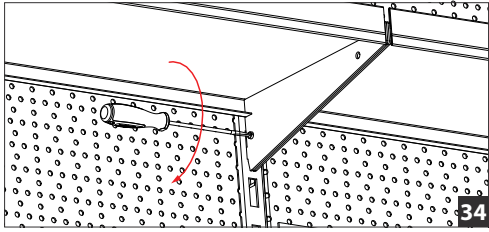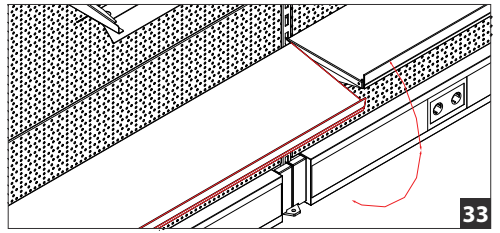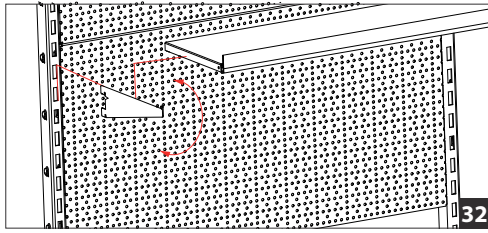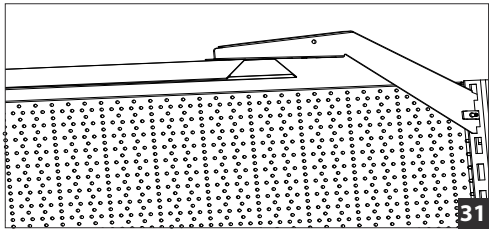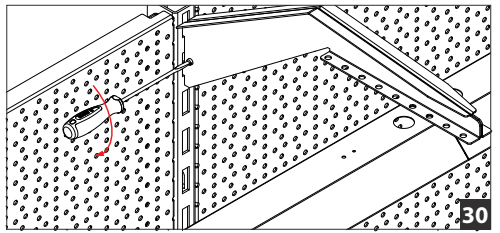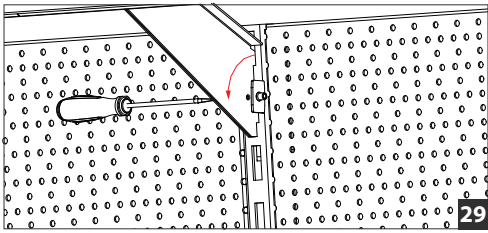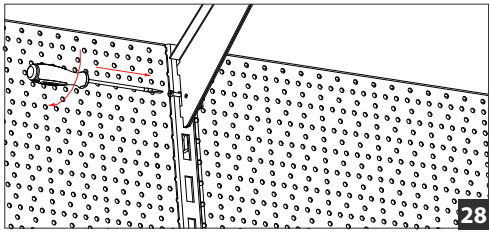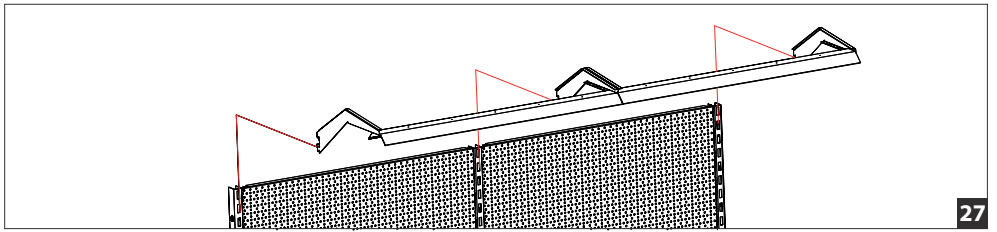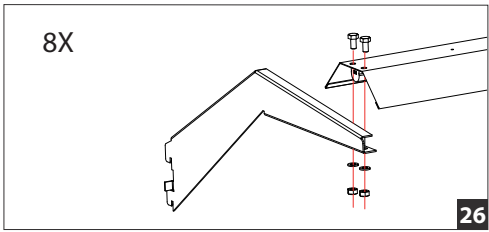

8X

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47



48

49



50

51


Drill holes into 990TWS only for 990S.. supports

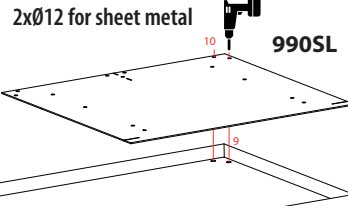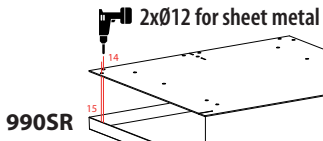


3xØ12 for sheet metal

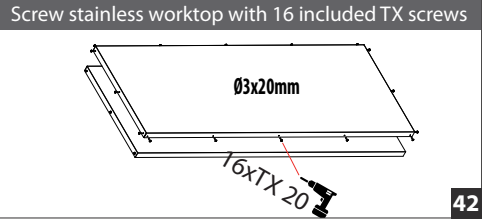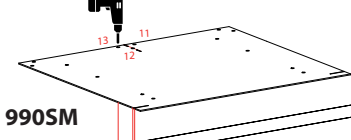


Optional: for the supports drill 5x Ø 10,5x24 on the upper left side

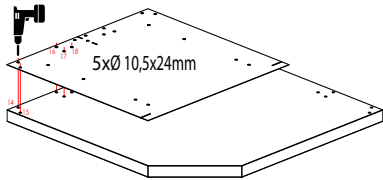


Optional: for the supports drill 5x Ø 10,5x24 on the upper right side

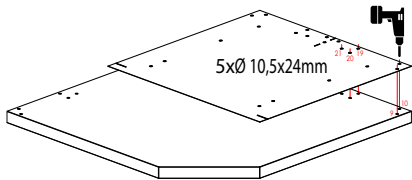

Optional: - without tool chest, screw all 4 legs on the bottom side
- with tool chest, screw 2 legs on the back (blue)

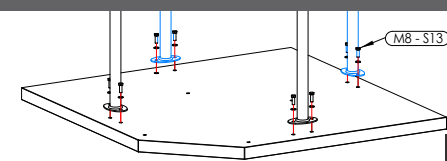

Unscrew cap screw on all legs to level them with the ground and to level upper side of all desks

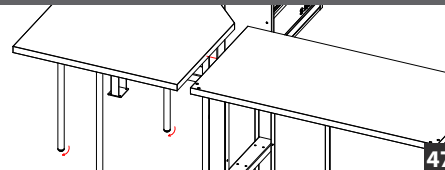

Look at picture 22

Look at picture 23